



**This antenna mounting bracket is designed for installation on these specific vehicles:**

**Chevrolet Suburban: 2000-2005**  
**Chevrolet P/U Trucks: 2000-2002**  
**GMC Sierra P/U Trucks: 2001-2006**  
**GMC Sierra Classic P/U Truck: 2007**


***Model#: SUANTPF***

**Tools Required:**

13mm socket and driver, or 13mm box end wrench

**Install location:**

Left front fender

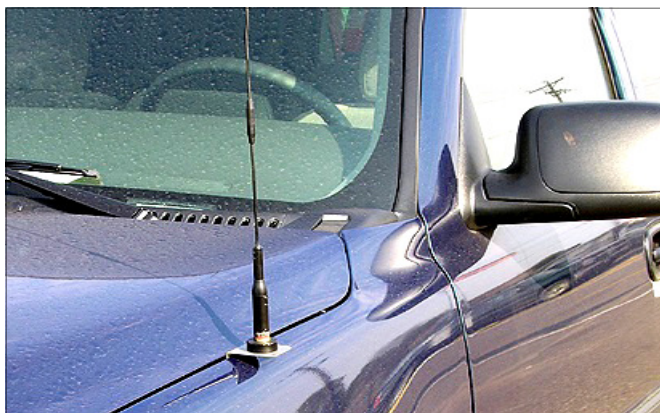

**Please Read: Always check for continuity between the bracket and chassis ground. If there is a problem with grounding, place the provided star washer between the bracket and the fender.**

**Step 1) Set the parking brake. Open hood and locate 13mm bolt near the back of the front fender. Remove bolt.**

**Step 2) Align the antenna bracket with the bolt hole. Reinstall the bolt and tighten.**

**Step 3) Insert the NMO or required connector to mate with the antenna and tighten securely.**



NCG Company may not be held liable for any damage to the vehicle before, during or after the installation or removal of this antenna bracket.  
NCG may not be held liable for any personal injury resulting from accident or improper installation.



National Communications Group Co., Ltd  
Chino, CA 800-962-2611  
909-393-6133 Fax: 909-393-6136  
www.natcommgroup.com